

# User Manual



**DG-iPodMSS**  
**Sound System for iPod® & iPhone®**



## HELPPROVIDED

### NEED HELP?

If you are experiencing difficulty operating this product or require set up assistance please contact the DGTEC Service Centre. The call is free from anywhere in Australia. Our operators will assist you in plain English without the technical jargon:



**Call**  
**1800 189 941**

(Australia)

8:00am-6:00pm Australian EST

\* Subject to change without notice.

# Table of Contents

---

<b>1</b>	<i>THANK YOU</i>	<i>1</i>
	Package Contents.....	4
	Features.....	4

---

<b>2</b>	<i>AT A GLANCE</i>	<i>5</i>
	Main Unit .....	5
	Remote Control .....	7
	About the Remote Control Battery.....	9

# Table of Contents

---

<b>3</b>	<i>GETTING STARTED</i>	<i>10</i>
	Connections.....	10
	Connecting Power.....	10
	Connecting an iPod® or iPhone® .....	10
	Connecting an Auxiliary Device .....	11
	Basic Controls.....	11

---

<b>4</b>	<i>USING IPOD®/IPHONE® MODE</i>	<i>12</i>
	Controls .....	12
	Browsing iPod/iPhone Menus with the Remote .....	13
	Rotating the Dock .....	13

# Table of Contents

<b>5</b>	<i>USING AUX MODE</i>	<i>14</i>
	Controls.....	14
<b>6</b>	<i>SPECIFICATIONS</i>	<i>15</i>
<b>7</b>	<i>SUPPORT</i>	<i>16</i>
<b>8</b>	<i>SAFETY &amp; REGULATORY STATEMENTS</i>	<i>17</i>

# Thank You

Thank you for purchasing the DG-iPodMSS for iPod® and iPhone®. Please read this manual carefully before using this device and retain it for future reference.

## Package Contents

- ◆ Main unit
- ◆ Power adapter
- ◆ Remote control
- ◆ 3.5mm auxiliary cable
- ◆ Instruction manual

If any of the above items are missing, please contact the supplier on 1800 189 941.



This package may contain plastic bags or other materials that pose a hazard to children. Be sure to safely dispose of all packing materials after opening.

 
## Features

- ◆ Premium sound system designed for iPod® & iPhone®
- ◆ Built-in Universal dock charges and plays your iPod/iPhone
- ◆ One-touch dock rotation lets you browse with Cover Flow or watch movies in landscape mode
- ◆ Bass Boost circuitry for low end frequency enhancement
- ◆ Supports iPod shuffle and other portable players with a 3.5mm audio connection
- ◆ Adjustable ambient lighting

## At a Glance

### Main Unit


1	[Rotate]	Press to rotate the dock.
2	[Volume -]	Press to decrease the volume level.
3	[Volume +]	Press to increase the volume level
4	[Standby]	Press to turn the unit on or off.
5	[AUX/iPod]	Press to switch between AUX and iPod modes.
6	[Light]	Press to increase or decrease the intensity of the background light.

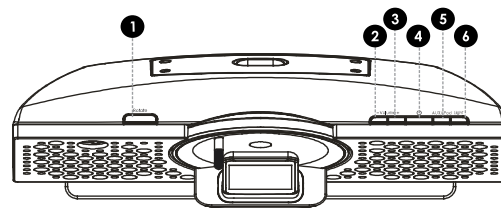




## At a Glance

 7	AUX IN	3.5mm auxiliary connector. Use a 3.5mm auxiliary cable to connect portable audio devices with a 3.5mm headphone output (e.g., iPod shuffle, MP3 players).
8	DC IN	Power connector. Use the AC adapter to connect to an AC 100-240V power outlet.
9	Universal Dock	Dock for iPod® and iPhone®. Connector for your compatible iPod or iPhone.

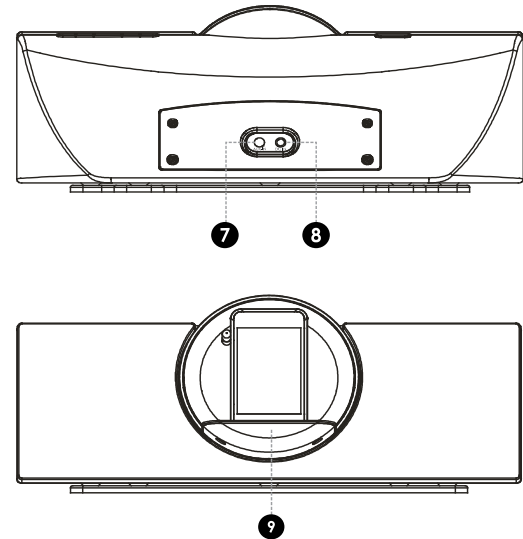


# Remote Control

 1	[Standby]	Press to turn the unit on or off.
2	[ROTATE]	Press to rotate the dock.
3	[LIGHT +]	Press to increase the intensity of the background light.
4	[LIGHT -]	Press to decrease the intensity of the background light.
5	[BASS]	Press to turn the Bass Boost enhancement on or off.
6	[LEFT]	Press to skip to the previous track. Hold to scan in reverse quickly through the current track.
	[RIGHT]	Press to skip to the next track. Hold to scan forward quickly through the current track.
	[UP]	Use to browse iPod® or iPhone® menus.
	[DOWN]	
7	[OK]	Press to enter an iPod or iPhone menu selection.

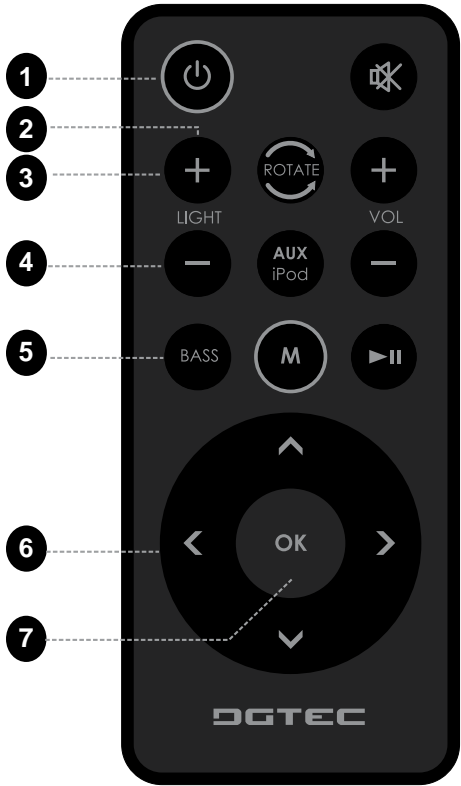

## Remote Control

 8	[MUTE]	Press to disable or enable speaker output.
9	[VOL +]	Press to increase the volume level.
10	[VOL -]	Press to decrease the volume level.
11	[AUX/iPod]	Press to switch between AUX and iPod modes.
12	[Play/ Pause]	Press to start or pause iPod or iPhone playback.
13	[M]	Press to access the iPod or iPhone menu, or to return to a previous screen.

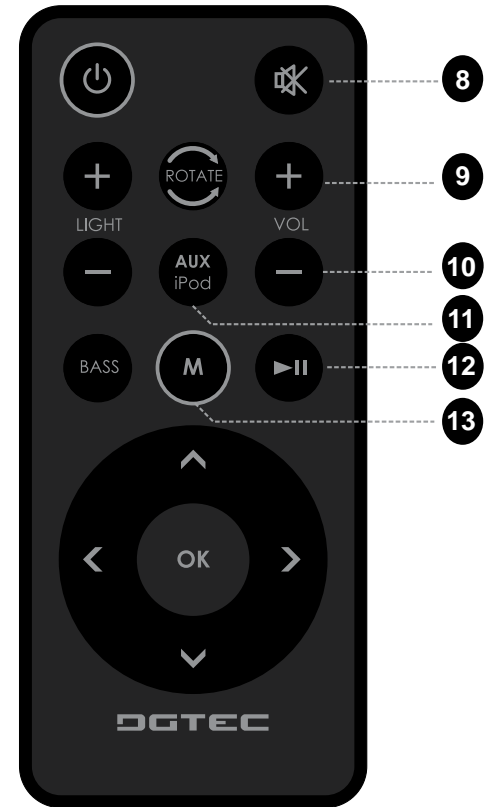


## About the Remote Control Battery

The remote control is powered by one (1) CR2025-type battery. Before using the remote, be sure to remove the plastic protective tab from the battery compartment.

To replace the battery:

 - ◆ Squeeze the tab of the battery compartment to the right while drawing the compartment out.
- ◆ Remove the battery and replace it with a new “CR2025” lithium battery.
- ◆ Replace the compartment.

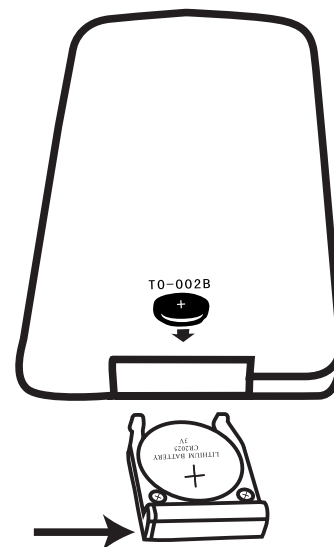

# Getting Started

## Connections

### Connecting Power

This unit is powered by an AC/DC adapter. Connect one end of the AC/DC adapter to an AC 100-240V 50/60Hz mains outlet. Connect the other end to the DC IN connector located on the rear of the unit.



Do not connect the power adapter to a power outlet other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Do not handle the power plug with wet hands. Doing so may cause electric shock.

### Connecting an iPod® or iPhone®

- ◆ If you have a compatible iPod or iPhone, you can play it through the speakers of the main unit.
- ◆ Compatible iPod/iPhone models are listed in the Specifications section of this manual.

### To connect your iPod/iPhone:

- ◆ Plug your compatible iPod/iPhone into the Universal Dock.

## Getting Started



Dock adapters are provided by Apple with their recent iPod models.

Compatible iPod or iPhone models will be charged when connected.

### Connecting an Auxiliary Device

If you have an audio device with a 3.5mm headphone out or line-out jack, you can play it through the speakers of the main unit.

#### To connect your auxiliary audio device:

- ◆ Connect one end of a 3.5mm auxiliary cable to the headphone out/line-out jack of the audio device.
- ◆ Connect the other end of the cable to AUX IN connector located on the rear of the main unit.

### Basic Controls

To do this...	...do this.
Turn the unit on or off	Press [Standby]
Change between iPod/iPhone and AUX playback mode	Press [AUX/iPod]
Adjust the volume level	Press [VOL +] or [VOL -]
Start, pause, or resume iPod/iPhone playback	Press [Play/Pause]
Rotate the dock	Press [ROTATE]



When the unit is in iPod mode, you may use the controls of your iPod/iPhone directly.

## Using iPod®/iPhone® Mode

To listen to your iPod or iPhone, simply place your iPod/iPhone in the Universal Dock.

- ◆ The main unit will turn on automatically.
- ◆ Music on the iPod/iPhone will start playing automatically.



Press [Play/Pause] to start music playback if it does not start automatically.

### Controls

When an iPod/iPhone is connected to the Universal Dock and the main unit is in iPod mode, the following controls are available.

Remote Key	Function
[Play/Pause]	Start or pause/resume playback.
[RIGHT]	Skip to the next track.

Remote Key	Function
[LEFT]	Skip to the previous track.
Hold [RIGHT]	Scan forward quickly through the current track.
Hold [LEFT]	Scan in reverse quickly through the current track.
[VOL +]	Increase the volume level.
[VOL -]	Decrease the volume level.
[MUTE]	Disable or enable speaker output.
[BASS]	Turn the Bass Boost enhancement on or off.
[ROTATE]	Rotate the dock.
[AUX/iPod]	Press to switch between AUX and iPod modes.

## Using iPod®/iPhone® Mode

### Browsing iPod/iPhone Menus with the Remote

Some functions of your iPod/iPhone can be controlled with the DG-iPodMSS remote control.

Remote Key	Function
[M]	Press to access the iPod/iPhone menu, or return to a previous screen.
[UP] [DOWN]	Use to browse iPod® or iPhone® menus.
[OK]	Press to enter an iPod or iPhone menu selection.



For iPod touch and iPhone models, you may need to start the Music/Video player application before the remote controls will work.

### Rotating the Dock

Rotate the dock horizontally to view your compatible iPod touch or iPhone in landscape position.

- ◆ Press [ROTATE] to rotate the dock landscape position.
- ◆ Press [ROTATE] again to return the dock to its normal, vertical position.

When your iPod/iPhone is in landscape position, you may:

- ◆ Browse your media collection with Cover Flow
- ◆ View album art
- ◆ Watch videos



## Using AUX Mode

To listen to an auxiliary device, use a 3.5mm auxiliary cable to connect it to the main unit.

- ◆ Press [Standby] to turn on the main unit.
- ◆ Start playback on the auxiliary device.
- ◆ Press [AUX/iPod] to set the main unit to AUX mode.



The auxiliary device must have a 3.5mm headphone out or line-out connection. Examples of an auxiliary device are iPod® shuffle and MP3/MP4 players.

## Controls

When the main unit is in AUX mode, the following controls are available.

Remote Key	Function
[VOL +]	Increase the volume level.
[VOL -]	Decrease the volume level.
[MUTE]	Disable or enable speaker output.
[BASS]	Turn the Bass Boost enhancement on or off.
[ROTATE]	Rotate the dock.
[AUX/iPod]	Press to switch between AUX and iPod modes.



 
Use the controls of the auxiliary device directly to control playback.

## Specifications

<b>Speaker Output (RMS)</b>	10W x 2
<b>Frequency Response</b>	40 –20,000Hz
<b>Impedance</b>	4Ω 8Ω
<b>Aux Input</b>	3.5mm stereo
<b>Power</b>	Input: AC 100-240V 50/60Hz
	Output: DC 20V, 1.8A
	Remote: CR2025 battery x 1
<b>Unit Dimensions (LWH)</b>	40.6 x 12.6 x 18.2 cm

<b>Made for*</b>	iPhone 3G
	SiPhone 3G
	iPhone 4G
	iPhoneiPod classic
	iPod touch
	iPod touch 2G
	iPod touch 3G
	iPod touch 4G
	iPod nano
	iPod nano 2G
	iPod nano 3G
	iPod nano 4G
	iPod nano 5G
	iPod nano 6G
	iPod 5G
	iPod photo
	iPod 4G
	iPod 3G
	iPod mini

## Safety & Regulatory Statements

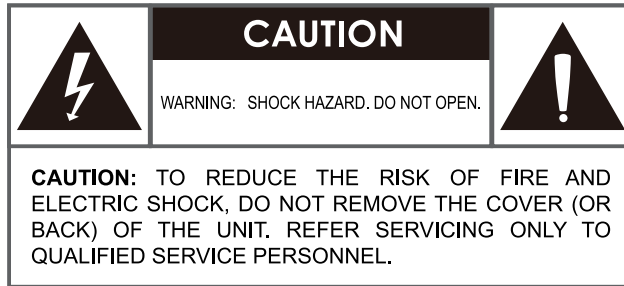

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.



For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance:  
[www.eiae.org](http://www.eiae.org).

**WARNING:** To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot of outlet and fully insert.

**NOTE:** This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly.

# Safety & Regulatory Statements

## Warnings and Precautions

To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment. Before operating this equipment, please read this manual completely, and keep it nearby for future reference.

## Important Safety Instructions

- ◆ Read Instructions: All the safety and operating instructions should be read before the product is operated.
- ◆ Retain Instructions: The safety and operating instructions should be retained for future reference.
- ◆ Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
- ◆ Follow Instructions: All operating and usage instructions should be followed.
- ◆ Do not place the equipment on uneven or unstable carts, stands, tables, shelves etc. The equipment may fall, causing serious injury to children or adults and serious damage to the equipment itself. Always place the equipment on the floor or on a surface that is sturdy, level, stable and strong enough to support the weight of the equipment.

- ◆ Use only a cart or stand recommended by the manufacturer. This equipment and recommended cart or stand should be handled with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart/stand to overturn.



- ◆ Do not disable the 3-wire grounding type plug. The grounding pin on the 3-prong plug is an important feature. Removing the grounding pin will increase the risk of damaging the equipment.
- ◆ If you can not fit the plug into the electrical outlet, contact an electrician to install a grounding outlet.
- ◆ Always operate this equipment from the type of power source indicated on the rear of the serial/ model plate.
- ◆ Never overload wall outlets and extensions.
- ◆ Remove the plug from the wall outlet, if the equipment will not be used for a long period of time.
- ◆ Do not place, use or handle this equipment near water.
- ◆ Never expose the equipment to liquid, rain, or moisture. Seek service if any of the above is spilled into the equipment.

## Safety & Regulatory Statements

- ◆ Do not expose the equipment to extreme temperature or to direct sunlight, as the equipment may heat up and suffer damage.
- ◆ Do not install the equipment near any heat sources such as radiators, heat registers, stoves, or any other apparatus that might produce heat.
- ◆ Do not attempt to service the equipment yourself.
- ◆ Opening and removing the covers may expose you to dangerous voltage or other hazards and may void your warranty. Refer service to qualified personnel.
- ◆ Do not place or drop any other objects on top.
- ◆ Do not insert anything into the ventilation holes of your equipment. Inserting any metal or flammable objects may result to fire or electric shock.
- ◆ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ◆ Always remove the power cord from the outlet before cleaning the equipment.
- ◆ Never use liquid or aerosol cleaners on the equipment. Clean only with a soft dry cloth.

- ◆ Only use attachments/accessories specified by the manufacturer.
- ◆ Where the mains plug is used as the disconnected device, the disconnect device shall remain readily operable.

### Listening with Earphones

- ◆ Listen at moderate Volumes to avoid hearing damage.
- ◆ If you hear no sound during playback, do not turn the Volume up as the music may suddenly begin at a high Volume. Excessive sound pressure from earphones and headphones can cause hearing loss.
- ◆ To avoid damaging your ears, adjust the Volume to the lowest level before playback, and turn up to the desired level when playback has started.

# Safety & Regulatory Statements

## Legal and Trademark Notices

“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.





**Head Office:**

Cnr Cambria & Bridge Road  
Keysborough VIC 3173

Technical Support - 1800 189 941

For more information go to - [www.dgtec.com.au](http://www.dgtec.com.au)